

Analog Heat

Stereo Analog Sound Processor



User Manual

FCC compliance statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Canada

This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003

European Union regulation compliance statement

This product has been tested to comply with the Low Voltage Directive 2006/95/EC and the Electromagnetic Compatibility Directive 2004/108/EC. The product meets the requirements of RoHS 2 Directive 2011/65/EU.



This symbol indicates that your product must be disposed of properly according to local laws and regulations.

Legal disclaimer

The information in this document is subject to change without notice and should not be construed as a commitment by Elektron. Elektron assumes no responsibility for any errors that may appear in this document. Elektron may also make improvements and/or changes in the products and programs described in this document at any time without notice. In no event shall Elektron be liable for any special, indirect, or consequential damages or any damages whatsoever resulting from loss of use, data, or profits, whether in an action of contract, negligence, or other action, arising out of or in connection with the use or performance of this information.

IMPORTANT SAFETY AND MAINTENANCE INSTRUCTIONS

Please read these instructions carefully and follow the operating advice given here.

1. Do not use this unit near water.
2. Never use aggressive cleaners on the casing or the LCD screen. Remove dust, dirt and fingerprints with a soft, dry and non-abrasive cloth. More persistent dirt can be removed with a slightly damp cloth using only water. Disconnect all cables before doing this. Only reconnect them when the product is safely dry.
3. Install by following the manufacturer's instructions. Make sure you place the unit on a stable surface before use.
4. Connect the unit to an easily accessible electrical outlet close to the unit.
5. When transporting the unit, use accessories recommended by the manufacturer or the original box and padding.
6. Do not install near any heat sources such as radiators, heat registers, stoves, or any other equipment (including amplifiers) producing heat.
7. Do not block the ventilation holes located on the bottom of the enclosure of the unit. Make sure there is sufficient air circulation in the room where the unit is kept.
8. This product, in combination with an amplifier and speakers or headphones, is capable of producing sound levels that can cause permanent hearing loss. Do not operate for extended periods of time at a high volume level or at a level that is uncomfortable.
9. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the unit.
10. Use attachments/accessories specified by the manufacturer.
11. Unplug this unit during lightning storms or when it is not used for extended periods of time.
12. Refer all servicing to qualified service technicians. Servicing is required when the unit has been damaged in any way, liquid has been spilled or objects have fallen into the unit, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING

To reduce the risk of fire, electrical shock or product damage:

- Do not expose the unit to rain, moisture, dripping or splashing and also avoid placing objects filled with liquid, such as vases, on the unit.
- Do not expose the unit to direct sunlight, nor use it in ambient temperatures exceeding 35°C as this can lead to malfunction.
- Do not open the casing. There are no user repairable or adjustable parts inside. Leave service and repairs to trained service technicians only.
- Do not exceed the limitations specified in the Electrical specifications.

SAFETY INSTRUCTIONS FOR THE POWER ADAPTER

- The adapter is not safety grounded and may only be used indoors.
- To ensure sufficient ventilation for the adapter, do not place it in tight spaces. To prevent the risk of electric shock and fire because of overheating, ensure that curtains and other objects do not prevent adapter ventilation.
- Do not expose the power adapter to direct sunlight, nor use it in ambient temperatures exceeding 40°C.
- Connect the adapter to an easily accessible electrical outlet close to the unit.
- The adapter is in standby mode when the power cord is connected. The primary circuit is always active as long as the cord is attached to the power outlet. Pull out the power cord to completely disconnect the adapter.
- In the EU, only use CE approved power cords.

TABLE OF CONTENTS

1. INTRODUCTION	7
1.1 CONVENTIONS IN THIS MANUAL	7
2. PANEL LAYOUT AND CONNECTIONS	8
2.1 FRONT PANEL CONTROLS	8
2.2 REAR PANEL CONNECTIONS	9
3. FIRST STEPS WITH THE ANALOG HEAT	10
3.1 CONNECTING THE UNIT.....	10
3.2 SETTING THE INPUT SENSITIVITY LEVEL	10
3.3 SETUP EXAMPLES	11
3.3.1 ANALOG HEAT AS AN EXTERNAL EFFECT	11
3.3.2 ANALOG HEAT AS A VST/AU PLUGIN USING OVERBRIDGE	11
3.3.3 ANALOG HEAT AS A SOUND CARD	11
4. SIGNAL FLOW	12
4.1 AUDIO SIGNAL FLOW	12
4.2 MODULATION SIGNAL FLOW	12
5. INTERACTING WITH THE ANALOG HEAT	12
5.1 PRESETS	12
5.1.1 LOADING A PRESET	12
5.1.2 SAVING A PRESET	13
5.2 ACTIVE MODE	13
5.3 EFFECT CIRCUITS.....	13
5.4 FILTER TYPES.....	13
5.5 EQUALIZER	13
5.6 DRIVE	14
5.7 WET LEVEL.....	14
5.8 DRY/WET	14
5.9 SETTINGS MENU	14
5.10 PARAMETER PAGES	14
5.11 PARAMETER EDITING.....	14
5.12 LCD SCREEN TITLE BAR	14
5.13 OVERBRIDGE.....	15
5.14 CLASS COMPLIANT DEVICE	15
5.15 BACKING UP THE ANALOG HEAT	15
5.15.1 BACKING UP PRESETS	15
5.15.2 TRANSFERRING BACKED UP FILES TO YOUR ELEKTRON DEVICE.....	16
6. THE SETTINGS MENU	16
6.1 INPUT SENSITIVITY	16
6.2 MODULATION	16
6.3 OPTIONS.....	17
6.3.1 INTERNAL TEMPO	17
6.3.2 ACTIVE AT START	17
6.3.3 KNOB MODE.....	17
6.4 CONTROL IN	17
6.4.1 CONTROL IN A.....	17
6.4.2 CONTROL IN B.....	18
6.5 AUDIO ROUTING.....	18

6.5.1 ANALOG IN/OUT (OVERBRIDGE MODE)	18
6.5.2 ANALOG IN/OUT (USB AUDIO/MIDI MODE)	19
6.5.3 USB CC MODE	19
6.5.4 USB TO MAIN	20
6.5.5 FX TO USB	20
6.6 MIDI	20
6.6.1 SYNC	20
6.6.2 PORT CONFIG	20
6.6.3 CHANNELS	21
6.7 SYSEX DUMP	21
6.7.1 SYSEX SEND	22
6.7.2 SYSEX RECEIVE	22
6.8 SYSTEM	22
6.8.1 USB CONFIG	22
6.8.2 USB AUDIO CONFIG	22
6.8.3 OS UPGRADE	23
6.8.4 CALIBRATION	23
7. PARAMETER PAGES	23
7.1 AMP PAGE	23
7.1.1 DRIVE	24
7.1.2 WET	24
7.1.3 DRY/WET	24
7.1.4 VOL	24
7.2 FILTER/EQ PAGE 1	24
7.2.1 FREQ	24
7.2.2 RESO	24
7.2.3 ENV	24
7.2.4 LFO	24
7.3 FILTER/EQ PAGE 2	24
7.3.1 FRQPAN	24
7.3.2 DIRT	24
7.3.3 EQ LO	25
7.3.4 EQ HI	25
7.4 ENVELOPE PAGE 1	25
7.4.1 MODE	25
7.4.2 ATK	26
7.4.3 REL	26
7.4.4 TRIG	26
7.5 ENVELOPE PAGE 2	26
7.5.1 BASE	27
7.5.2 WIDTH	27
7.5.3 DEST1	27
7.5.4 DEPTH1	27
7.6 LFO PAGE 1	27
7.6.1 SPEED	27
7.6.2 MULT	27
7.6.3 WAVE	28
7.6.4 START	28
7.7 LFO PAGE 2	28
7.7.1 FADE	28
7.7.2 MODE	28
7.7.3 DEST1	28
7.7.4 DEPTH1	28

8. TIPS & TRICKS	29
8.1 ADDING SATURATION TO THE HIGH REGISTER	29
8.2 PSEUDO-COMPRESSION	29
8.3 STEREO PHASER EFFECT	30
9. STARTUP MENU	30
9.1 TEST MODE.....	30
9.2 EMPTY RESET.....	30
9.3 FACTORY RESET	30
9.4 OS UPGRADE.....	30
10. TECHNICAL INFORMATION.....	31
11. CREDITS AND CONTACT INFORMATION.....	32
APPENDIX A: MIDI.....	33
APPENDIX B: MODULATION SOURCES AND DESTINATIONS	34
INDEX.....	35

1. INTRODUCTION

Thank you for purchasing Analog Heat. The Analog Heat is a stereo analog sound processor with many great features such as; 8 different analog effect circuits, an analog multimode filter, analog EQ, and support for Elektron's groundbreaking software suite Overbridge.

Its innovative combination of modern technology and tried and trusted ways of analog sound processing lets you add sparkly brilliance, or grimy roughness, to any sound source. Samplers, drum machines, synths, the master bus, you name it. Analog Heat is a fiery furnace destined to make your music glow and sizzle.

Please read this manual in its entirety to get the most out of your machine.

1.1 CONVENTIONS IN THIS MANUAL

We have used the following conventions throughout the manual:

Key names are written in upper case, bold style and within brackets. For instance, the key labeled "Settings" on the main panel is written as **[SETTINGS]**.

Knobs are written in upper case, bold, italic letters. For instance, the knob "Frequency" is called ***FREQUENCY***.

LED indicators like the Active LED are written like this: **<ACTIVE>**.

Menu names are written in upper case letters. The AMP menu is an example of that.

Parameter names and certain menu options where settings are made or actions performed are written in bold, upper case letters. For example, **ATTACK**.

Upper case letters are used for parameter setting alternatives, for example, **OFF**.

Messages visible on the screen are written in upper case letters with quotation marks. For example, "INPUT LEVEL TOO HIGH!".

The manual uses the following symbols:



Important information that you should pay attention to.




A tip that makes it easier for you to interact with Analog Heat.



The right ear. Nobody wants the wrong one.


2. PANEL LAYOUT AND CONNECTIONS

2.1 FRONT PANEL CONTROLS

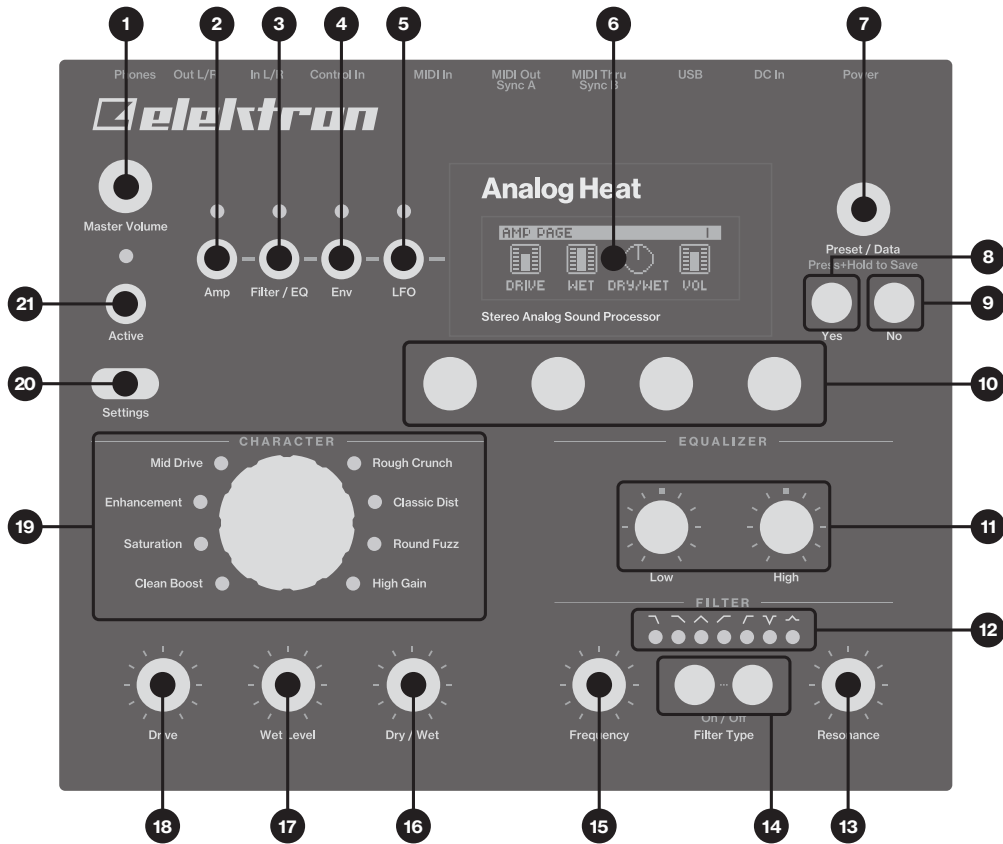

- 1. MASTER VOLUME** sets the master volume for the L/R and Headphones outputs.
- 2. [AMP]** key accesses the AMP parameter page where you can set things such as drive amount and the volume of the preset.
- 3. [FILTER/EQ]** key accesses the FILTER/EQ parameter pages where you, among other things, can set the filter frequency cutoff, and adjust the equalizer. Press twice to access the second page.
- 4. [ENV]** key accesses the ENV parameter pages where you adjust the settings for the envelope generator/envelope follower. Press twice to access the second page.
- 5. [LFO]** key accesses the LFO parameter pages where you set all things related to the Low Frequency Oscillator. Press twice to access the second page.
- The LCD screen.
- PRESET/DATA** Used for preset management, such as Save and Load, and data entry.
- [YES]** key is used for entering sub-menus, selecting and confirming.
- [NO]** key is used for exiting the current menu, backing to a higher level menu and negating.
- DATA ENTRY** knobs. Used to set parameter values. Press the knob when turning to change values in larger increments. For more information, please see "5.11 PARAMETER EDITING" on page 14.
- LOW** and **HIGH** adjusts the amount of low-end and high-end frequency content.
- <FILTER TYPE> LEDs that indicate the current type of filter and also if the filter is on or not.
- RESONANCE** sets the resonance of the filter.
- [FILTER TYPE]** selects between the different filter types. Also, pressing both keys at the same time toggles the filter on and off.
- FREQUENCY** sets the filter's cutoff frequency.
- DRY/WET** sets the balance between the unprocessed (dry) signal and the processed (wet) signal.
- WET LEVEL** sets the level of the processed (wet) signal.
- DRIVE** controls the amount of drive. It increases the effect (distortion) of the selected circuit type.
- CIRCUIT SELECTOR** chooses between the eight different types of analog effect circuits.
- [SETTINGS]** key accesses the SETTINGS menu. See "6. THE SETTINGS MENU" on page 16.
- [ACTIVE]** toggles the effect between active and bypassed.

2.2 REAR PANEL CONNECTIONS

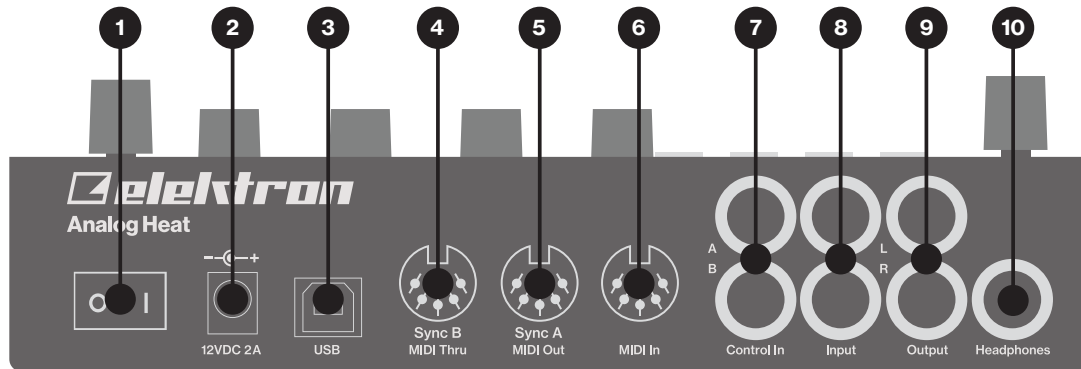

1. **POWER**, Switch for turning the unit on and off.
2. **DC In**, Input for power supply. Use the included PSU-3b power adapter, connected to a power outlet.
3. **USB**, For connecting the unit to a computer. For MIDI-control or Overbridge use. Connect to a computer host using the included A to B USB 2.0 connector cable.
4. **MIDI THRU/SYNC B**, Forwards data from MIDI IN. Can also be configured to send DIN sync to legacy instruments. Use standard MIDI cable to connect another MIDI unit in the chain.
5. **MIDI OUT/SYNC A**, MIDI data output. Can also be configured to send DIN sync to legacy instruments. Use standard MIDI cable to connect to MIDI In of an external MIDI unit.
6. **MIDI IN**, MIDI data input. Use standard MIDI cable to connect to MIDI Out of an external MIDI unit.
7. **CONTROL IN A/B** Inputs for an expression pedal, footswitch, or CV. Use 1/4" mono phone plug for CV signals.
8. **INPUT L/R**, Audio inputs. Use either 1/4" mono phone plug (unbalanced connection) or 1/4" (Tip/Ring/Sleeve) phone plug (balanced connection).
9. **OUTPUT L/R**, Main audio outputs. Use either 1/4" mono phone plug (unbalanced connection) or 1/4" (Tip/Ring/Sleeve) phone plug (balanced connection).
10. **HEADPHONES**, Audio output for stereo headphones. Use 1/4" (Tip/Ring/Sleeve) phone plug.

3. FIRST STEPS WITH THE ANALOG HEAT

3.1 CONNECTING THE UNIT

Make sure you place the Analog Heat on a stable support, such as a sturdy table with sufficient cable space. Before you start connecting the Analog Heat to other units, make sure all units are switched off.

1. Plug the supplied DC adapter to a power outlet and connect the small plug to the 12 V DC connector of the Analog Heat unit.
2. Connect the audio source to INPUT L/R.
3. Connect the OUTPUT L/R from the Analog Heat to your mixer or amplifier.
4. To process sound and/or control the Analog Heat from a computer, connect a USB cable between the computer and the USB connector of the Analog Heat. You must also download and install the Overbridge Suite to perform these actions.
5. If you want to use MIDI to control the Analog Heat, connect the MIDI OUT port of the device you wish to send data from to the MIDI IN port of the Analog Heat. You can use the MIDI THRU port for chaining MIDI devices together since it duplicates the data arriving at the MIDI IN port.
6. Switch on all units. Switch on the Analog Heat by pressing the Power switch located at the back of the device.

3.2 SETTING THE INPUT SENSITIVITY LEVEL



To make sure the Heat distorts as intended it is important to adjust the audio input sensitivity level so that it matches the level of the sound source.

To make sure the Heat distorts as intended it is important to set the audio input sensitivity so that it matches the level of the sound source. (Note that the settings made here only affects the analog input, and not the digital input from Overbridge.) Follow these steps to set the input sensitivity level:

1. Connect your sound source to the **IN L/R** inputs of the Analog Heat and make sure that the volume of the sound source is as strong as possible.
2. Press **[SETTINGS]** and then select **INPUT SENSITIVITY**. Keep an eye on the audio input meter and change the input sensitivity until you find a setting where the bar reaches the vertical line but without clipping. The message "INPUT LEVEL TOO HIGH" is displayed on the LCD screen when the input level is too high, and clipping occurs.



Optimal input level.



Too high input level.


3. Adjust the level at the sound source if needed.

3.3 SETUP EXAMPLES

The Analog Heat is very well suited for use in both an analog setup and in a more digital environment. Here are a couple of examples of how you can use the Analog Heat. For additional information about how to set up Analog Heat in different configurations, please see "6.5 AUDIO ROUTING" on page 18.


3.3.1 ANALOG HEAT AS AN EXTERNAL EFFECT

In this example, the Analog Heat is used as an external effect to add color to the Elektron Octatrack before the signal reaches the mixer.

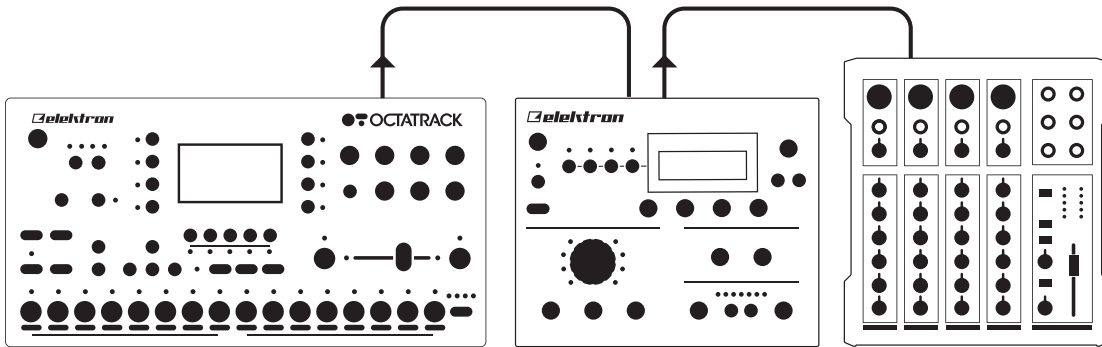


3.3.2 ANALOG HEAT AS A VST/AU PLUGIN USING OVERBRIDGE

Analog Heat can also be used together with Overbridge to allow you to use the Analog Heat as a plugin for analog distortion processing in your DAW.

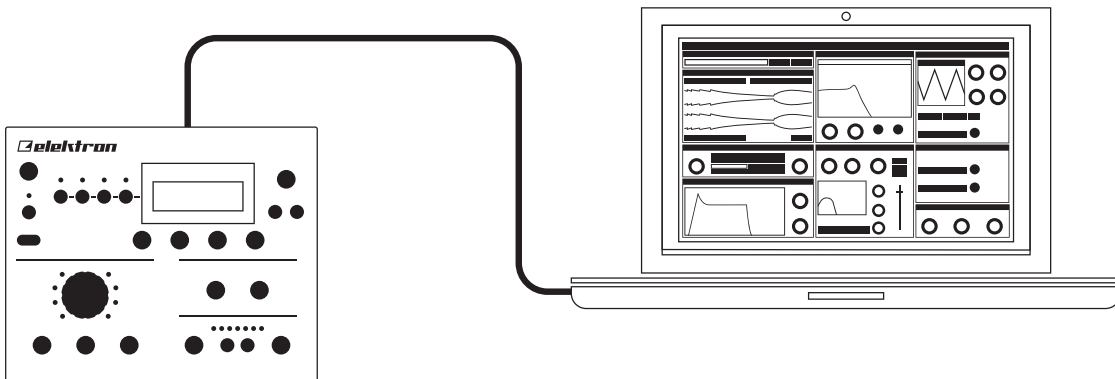

3.3.3 ANALOG HEAT AS A SOUND CARD

Analog Heat also functions as a 2 in/2 out sound card for your computer and can be used for both recording and monitoring audio. At the same time you can, via Overbridge, also use the effect to process another set of audio signals.

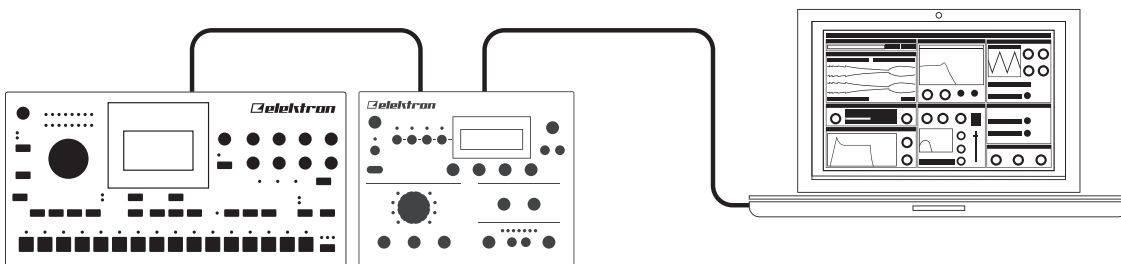


4. SIGNAL FLOW

The illustrations below show the signal flows of the Analog Heat and illustrates how the different components interact with each other.


4.1 AUDIO SIGNAL FLOW

This illustration shows the general flow of audio through the Analog Heat. The complete signal chain is in stereo.

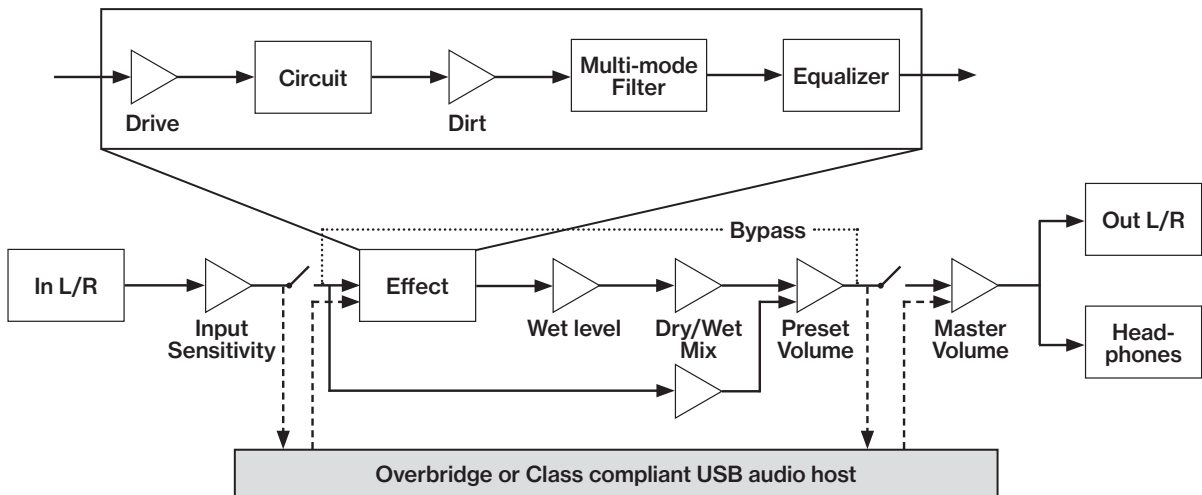

4.2 MODULATION SIGNAL FLOW

This illustration shows the flow of how modulation signals are generated and routed through the Analog Heat.

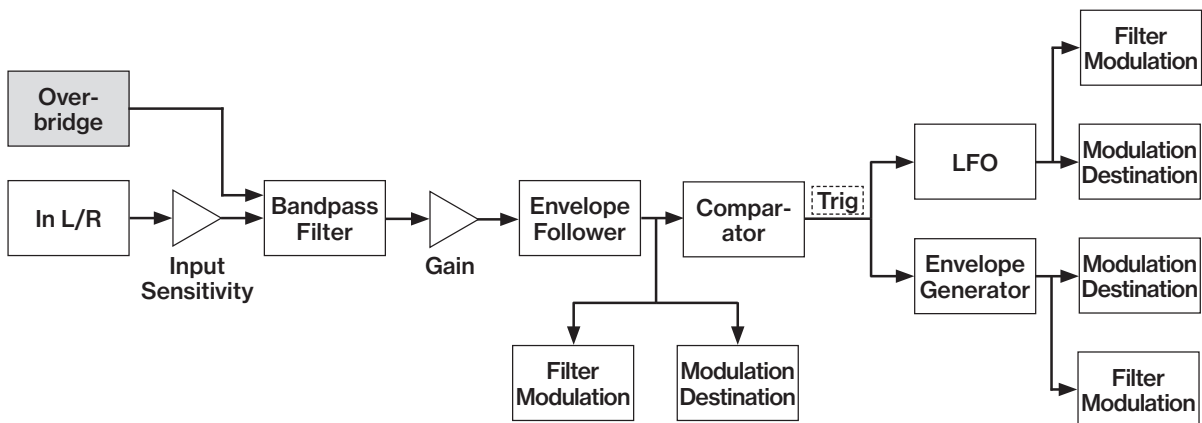

5. INTERACTING WITH THE ANALOG HEAT

5.1 PRESETS

The Analog Heat has 128 preset slots where you can store your presets. Preset slot 000 is an INIT preset with default values. Note that, when switching off the power on your Heat, any changes to the currently active preset will be lost unless the preset is first saved. There is an indicator (next to the preset number) on the LCD screen showing when changes have been made to the preset. For more information, please see "5.12 LCD SCREEN TITLE BAR" on page 14.

5.1.1 LOADING A PRESET

1. Turn **PRESET/DATA** to select a preset.
2. Press **PRESET/DATA** or **[YES]** to load the preset.

5.1.2 SAVING A PRESET

1. Press and hold **PRESET/DATA** for two seconds. The selected preset now starts to blink to illustrate that you are about to overwrite a preset position.
2. Turn **PRESET/DATA** to select the preset slot to where you want to save your sound, and then press **[YES]**
3. (Optional) Turn **PRESET/DATA** to the character you wish to edit. Press and hold **[SETTINGS]** and then turn **PRESET/DATA** to move the cursor to the desired character and select it by releasing **[SETTINGS]**. To delete a character, turn **PRESET/DATA** to move the cursor to highlight the character after the one you wish to delete, then press and hold **[SETTINGS]** and press **[NO]** twice.
4. Press **[YES]** to save the preset.

5.2 ACTIVE MODE

Active Mode is toggled on and off by pressing **[ACTIVE]**. If the Analog Heat is not in Active Mode, the effect is bypassed. The <ACTIVE> LED indicates if the effect is active or not. You can also use a Footswitch to toggle the Active Mode. For more information, please see "6.4 CONTROL IN" on page 17. You also have the option to set if you want the Analog Heat to start in active mode or not when you turn it on. For more information, please see "6.3.2 ACTIVE AT START" on page 17.

5.3 EFFECT CIRCUITS



You can use the **CIRCUIT SELECTOR** to choose between 8 different types of effect circuits for a wide variety of drive and distortion sounds.

- **CLEAN BOOST**
Makes the signal louder. When fully driven, it sounds similar to overdriving old mixers. Use for minimal distortion or when you only want to use the filter and EQ.
- **SATURATION**
This circuit is reminiscent of classic tape saturation. Woolly and warm.
- **ENHANCEMENT**
Adding tube-like glow and sheen to a track or loop.
- **MID DRIVE**
Mid-range focused overdrive with a solid and distinct body.
- **ROUGH CRUNCH**
Gritty, worn and gnarly character. Full of flavor.
- **CLASSIC DIST**
Pleasantly distorts upper mid-range frequencies. Ideal for acid bass lines.
- **ROUND FUZZ**
Adds a lot of harmonics and alters the signal in interesting and often unpredictable ways.
- **HIGH GAIN**
Probably the most aggressive of all the circuits. Very maxed out!

5.4 FILTER TYPES

Change the type of the filter by pressing one of the two **[FILTER TYPE]** keys. You can also press the two **[FILTER TYPE]** keys simultaneously to toggle the filter on/off. It is possible to change the filter type even if the filter is turned off.

There are seven different analog filter types in the Analog Heat to help to shape the sound.

- **LOW PASS 2** (two-pole, 12 dB per octave)
- **LOW PASS 1** (one-pole, 6 dB per octave)
- **BAND PASS**
- **HIGH PASS 1** (one-pole, 6 dB per octave)
- **HIGH PASS 2** (two-pole, 12 dB per octave)
- **BAND STOP (NOTCH)**
- **PEAK**

5.5 EQUALIZER

LOW and **HIGH** adjusts the amount of low-end and high-end frequency gain or attenuation of the effect circuit. Each character circuit comes with its tailor-made equalizer characteristics. For more information, please see "4.1 AUDIO SIGNAL FLOW" on page 12.

5.6 DRIVE

Sets the gain level in the effect circuit. A higher setting increases the effect of the selected circuit type, typically resulting in more distortion. For more information, please see "4. SIGNAL FLOW" on page 12.

5.7 WET LEVEL


Sets the level of the signal coming from the effect. It is applied before the DRY/WET mix. It is used to match the level of the dry signal for easy mixing of the two. For more information, please see "4. SIGNAL FLOW" on page 12.

5.8 DRY/WET

Sets the mix between the clean signal and the signal that is affected by the effect. For more information, please see "4. SIGNAL FLOW" on page 12.

5.9 SETTINGS MENU

Press [SETTINGS] to access the SETTINGS menu.

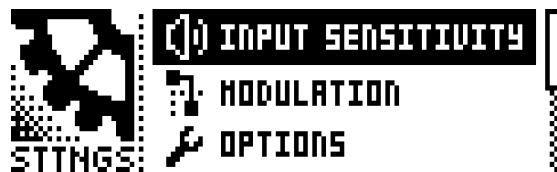

Scroll through the list of settings by using the *PRESET/DATA* knob. Open a highlighted menu by pressing the *PRESET/DATA* knob or [YES]. To change the settings in the menus, first press and then turn the *PRESET/DATA* knob. For more information, please see "6. THE SETTINGS MENU" on page 16.

5.10 PARAMETER PAGES


Access the parameter pages by pressing the corresponding key [AMP], [FILTER/EQ], [ENV], and [LFO]. There are two pages associated with each key (AMP has only one page). You can access the secondary pages by pressing the [PARAMETER] key a second time. For more information, please see "7. PARAMETER PAGES" on page 23.

5.11 PARAMETER EDITING

The four *DATA ENTRY* knobs are used to change the parameter values that are shown on the LCD screen. (Some parameters also have dedicated knobs on the panel.) The physical location of the knobs on the front panel correspond to the layout of the parameters on the screen.

- Press down and turn the *DATA ENTRY* to adjust the parameters in larger increments.
- Press [SETTINGS] + turn *DATA ENTRY* knob to quantize the parameter value to integers.
- Press [NO] + *DATA ENTRY* knob to reset the parameter to the default value.
- Press [NO] + [PARAMETER] key to reset the selected parameter group to default values.
- Use the [NO] key to exit an active menu, back to a higher level menu and to negate.

5.12 LCD SCREEN TITLE BAR

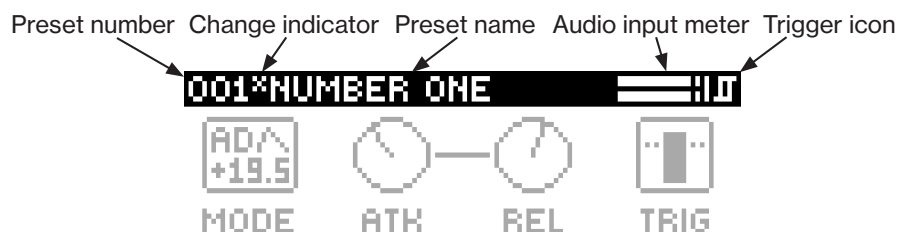

- The Preset number and Preset name displays the currently selected preset. If you push one of the parameter keys, the title bar briefly shows the name of the active parameter page. This text is replaced by parameter names when turning the *DATA ENTRY* knobs or the dedicated controllers.
- Between the preset number and the preset name, there is an indicator showing if the preset has been altered. (i.e. changes that may be lost unless you save the preset.)
- The Audio input meter displays the level of the incoming audio.
- The Trigger icon signals that a trigger event has been generated by the Envelope Follower.

5.13 OVERBRIDGE

This manual primarily focuses on how to use the Analog Heat as a standalone effect. But you can also use Overbridge to interact with the Analog Heat. The Overbridge software suite enables a tight integration between the Analog Heat and a computer.

Overbridge allows you to use the Analog Heat as a VST/AU plugin for analog distortion and filter processing in your DAW. It also has a librarian for a clear overview of your presets and gives the ability to load, edit, and save them.

When using the Overbridge setup, the user interface for your Analog device will present itself as a clearly laid out plug-in window in your DAW. Browse through and organize presets. Access, edit or automate parameters for sound shaping on screen. Always find your device preset parameters in the same state as you left them when you return to your DAW project, with the convenient total recall functionality.


You need an Analog Heat, a USB cable, a computer running Overbridge, and a DAW.

If you want to hook up multiple machines to a computer, you must use a USB hub. We suggest the Elektron Overhub, tailored for Overbridge use. It is Multi-TT hub and thereby also supports older Elektron machines.

Overbridge is available as a complimentary download on the Elektron website. Please read the Overbridge manual (also available on the Elektron website, Support section) to learn more about its uses and capabilities.

Once installed, for Overbridge to work together with your Analog Heat, do the two following two things:

First - Make sure the OS of your Analog Heat, and the OS of Overbridge, match. Simply put, always have the most recent OS installed on both computer and device. You find the latest versions of both operating systems included with the Overbridge Suite download package.

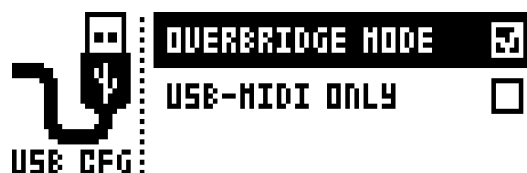

Second - set your Analog Heat device to Overbridge mode. You will find this setting in the SETTINGS > SYSTEM > USB CONFIG menu. Press [YES] to tick the OVERBRIDGE box. For more information, please see "6.8.1 USB CONFIG" on page 22.

For more detailed information about installing and using Overbridge, please see the Overbridge User Manual that you can download from the Elektron website.

5.14 CLASS COMPLIANT DEVICE

The Analog Heat is a class compliant device (also known as plug-and-play). It means it does not require any extra drivers to connect to your Windows or macOS computer, or your iOS device.

The Analog Heat can, therefore, stream audio and MIDI directly over USB to and from supported computers/phones/tablets. It opens up several exciting possibilities of what you can do with your device, for example, record audio from your device directly over USB in your DAW. For more information, please see "6.8.1 USB CONFIG" on page 22.

5.15 BACKING UP THE ANALOG HEAT

It is always recommended to make regular backups of your data. Backups are also a convenient way to share your presets with other users. To make backups and transfer files to and from your Elektron device, you should use Transfer, a free application that you can download from the Elektron site <https://www.elektron.se/support>. The application is available for both Windows and macOS.

5.15.1 BACKING UP PRESETS

You can backup up your presets from your Elektron device to a computer. Here is the general procedure for how to back up your device:

1. Connect the Elektron device to the computer via USB.
2. Open the Transfer application on your computer, and then select the USB MIDI port(s) for your device on the CONNECTION page, and then click "CONNECT" (or click "CONNECT" next to your device under PREVIOUSLY USED if it has been connected before).
3. In Transfer, click the EXPLORE tab to open the EXPLORE page.
4. On the EXPLORE page top left side of the drop-down menu, make sure "MY COMPUTER" is selected.
5. On the top right side, in the drop-down menu, select the type of file you want to transfer.

6. THE SETTINGS MENU

6. In the window on the right, navigate to the files or folders you want to transfer
7. Drag and drop the files or folders to your preferred location under "MY COMPUTER."

5.15.2 TRANSFERRING BACKED UP FILES TO YOUR ELEKTRON DEVICE


Use the EXPLORE page in Transfer to transfer previously backed up files to your Elektron device from a computer.

1. Connect the Elektron device to the computer via USB.
2. Open the Transfer application on your computer and then select the USB MIDI port(s) for your device on the Transfer CONNECTION page. Click "CONNECT" (or click "CONNECT" next to your device under PREVIOUSLY USED if it had been connected before).
3. In Transfer, click the EXPLORE tab to open the EXPLORE page.
4. On the top right side, in the drop-down menu, select the type of file you want to transfer.
5. On the top left side in the drop-down menu, make sure "MY COMPUTER" is selected.
6. Under "MY COMPUTER," navigate to the files or folders you want to transfer.
7. Drag and drop the files or folders to your preferred location on your device.
8. Depending on what file type you send, you might encounter pop-up windows asking you to decide what files you want to send and how you want to organize them.

6. THE SETTINGS MENU

Here follows a description of all the parameters that are in the SETTINGS menu. You access the SETTINGS menu by pressing the [SETTINGS] key. Scroll through the list of settings by using the *PRESET/DATA* knob. Open a highlighted menu by pressing the *PRESET/DATA* knob or [YES]. To change the settings in the menus, first press and then turn the *PRESET/DATA* knob.

6.1 INPUT SENSITIVITY



INPUT SENSITIVITY **MEDIUM**

**CONNECT AND PLAY YOUR AUDIO
SOURCE TO TEST SIGNAL LEVEL**

Sets the audio input level to fit the audio level sent to the effect via the IN L/R inputs. It is important to set this level correctly to get the best sound from your Analog Heat. There are four different settings for the input sensitivity: LOW, MID, HIGH & MAX. Low is the most silent, Max is the loudest. For more information, please see "3.2 SETTING THE INPUT SENSITIVITY LEVEL" on page 10.

- **LOW** (Maximum input level 10,5 V, peak to peak)
- **MID** (Maximum input level 5,3 V, peak to peak)
- **HIGH** (Maximum input level 2,5 V, peak to peak)
- **MAX** (Maximum input level 1,2 V, peak to peak)

6.2 MODULATION




SOURCE	DEST	DEPTH
ENV 1st	none	
ENV 2nd	Wave	
LFO 1st	Hot Level	0.00

Here you can connect a number of modulation sources with their destinations and set the modulation depth. For more information, please see "APPENDIX B: MODULATION SOURCES AND DESTINATIONS" on page 34.

1. Turn the *PRESET/DATA* knob to scroll through the source list, and then select it by pressing *PRESET/DATA* or [YES].

- Turn the **PRESET/DATA** knob to scroll through the available destinations, and then select it by pressing **PRESET/DATA** or **[YES]**.
- Lastly, set the modulation depth amount by turning the **PRESET/DATA** knob. A negative value gives an inverted modulation. You can also use the rightmost **DATA ENTRY** knob to set the modulation depth. To reset the modulation amount to 0, press and hold **[NO]**.

6.3 OPTIONS

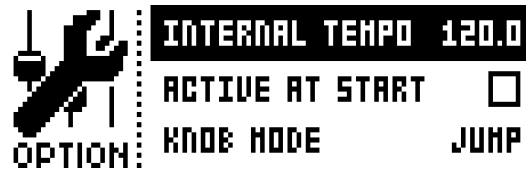

6.3.1 INTERNAL TEMPO

Sets the internal tempo. The tempo range is 30 – 300 BPM. This tempo controls the speed of the LFO. The Analog Heat can also be set to respond to MIDI clock sent from external devices. If the device is synced from either MIDI Clock or Overbridge, the Internal Tempo setting is locked from editing, and this parameter instead shows the sync source together with the currently active (external) tempo. For more information, please see "6.6.1 SYNC" on page 20.



You can also use tap tempo. To tap a tempo setting, highlight **INTERNAL TEMPO** in the **SETTINGS** menu, and then press and hold the **[SETTINGS]** key and tap the **[YES]** key in a steady rhythm. The average tempo of the taps calculates after four consecutive taps. By continuing tapping, the average tempo keeps on updating.

6.3.2 ACTIVE AT START

Sets if Analog Heat is in Active or bypass mode when it is turned on.

6.3.3 KNOB MODE

Sets how the knobs on the panel affect the parameters. When you load a preset, the knobs positions typically don't match their parameter values.

- JUMP** immediately sets the value to the current knob position.
- In **CATCH** mode, turning the knob do not change the parameter value until the knob position matches the presets stored value.

You can see the current value of the parameter in the LCD screens title bar while you turn the knob.

6.4 CONTROL IN



6.4.1 CONTROL IN A

- CONTROL MODE**
Sets the port mode to adjust to different kinds of input signals. There are four modes: **CV** (Control Voltage), **EXPR** (Expression Pedal), **FOOTSW** (Footswitch) and **OFF**.
- CV ZERO LEVEL** (Available when mode is set to **CV**)
Sets the Volt level at which CV modulation amount is zero. A control input level equal to this setting corresponds to zero modulation. (-5.50 V–+5.50 V).

6. THE SETTINGS MENU

- **CV MAX LEVEL (Available when mode is set to CV.)**
Sets the Volt level at which CV modulation amount is max. A control input level equal to this setting corresponds to full modulation. (-5.50 V–+5.50 V).
- **EXPRESSION LEARN (Available when mode is set to EXPR.)**
Sets the highest and lowest limit of the control input level. When in this setting, connect the Expression pedal to CONTROL IN A/B. Press YES and then move the expression pedal first to max and then to min position. Press YES to save settings.
- **REVERSE DIRECTION (Available when mode is set to EXPR.)**
Reverses the direction of how the Expression pedal sends control input signals.
- **FOOTSW DEST (Available when mode is set to FOOTSW.)**
Sets the destination of the control input from the Footswitch. The options are: TEMPO, ACTIVE PRE-SET +, PRESET -, ENV TRIG
- **FOOTSWITCH LEARN (Available when mode is set to FOOTSW.)**
Sets the high and low limit of the control input level. When in this setting, connect the Footswitch pedal to CONTROL IN A/B. Press YES and then press the Footswitch pedal a couple of times. Press YES to save settings.
- **REVERSE DIRECTION (Available when mode is set to FOOTSW.)**
Reverses the direction of how the Footswitch pedal sends control input signals.

6.4.2 CONTROL IN B

The available settings are the same as for **CONTROL IN A** mentioned above.


6.5 AUDIO ROUTING

These settings are stored in the global settings and are not part of the preset.



6.5.1 ANALOG IN/OUT (OVERBRIDGE MODE)

Sets if the signal from the analog inputs (INPUT L/R) is routed to the Analog Heat's FX or not. It also sets if the signal from the effect is routed to analog outputs (OUTPUT L/R and HEADPHONES) or not. These are the settings if Overbridge mode is chosen in the USB CONFIG menu. For more information, please see "6.8.1 USB CONFIG" on page 22.

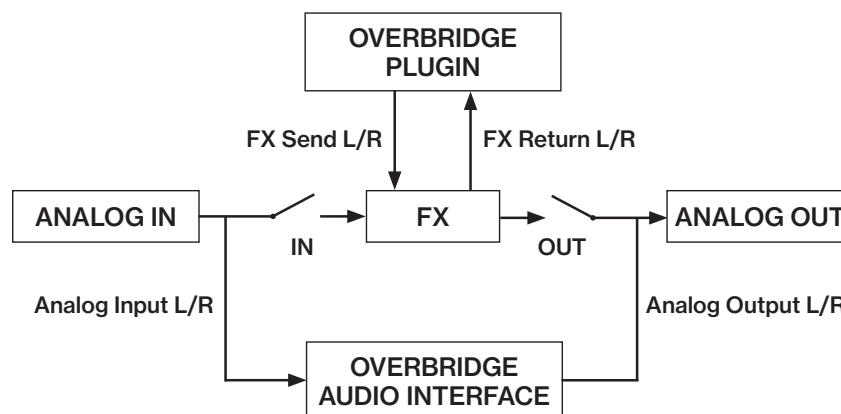

Analog Heat supports 4 channels of audio. Audio from Analog Input is routed to the analog in-, and out-, and can optionally also be routed through the Analog Heat's FX (distortion circuit, EQ, and filter). FX Send L/R is always routed to the effect.

- **AUTO** In AUTO mode, Analog Heat automatically detects if the Overbridge plugin is running or not. With Overbridge running, the Analog In is not routed through the effect to the Analog Out. (Same as **OFF** setting.) If Overbridge is not running, the signal from Analog In is routed through the Analog Heat's FX to the Analog Out. (Same as the **IN+OUT** setting.)

- **IN+OUT** Both Analog In and Analog Out are routed to the Analog Heat's FX.
- **IN** Routes the signal from Analog In to the Analog Heat's FX.
- **OUT** Routes the signal from the effect to Analog Out.
- **OFF** Neither Analog In nor Analog Out are routed to the Analog Heat's FX.




You can use the Analog Heat as a regular audio interface and let signals pass in and out unaffected by the effect. At the same time, you can, via Overbridge, also use the effect to process another set of audio signals.

AUTO mode is suitable for most use cases. It lets the Analog Heat function both as a standalone effect and together with Overbridge as a plugin, while still retaining its functionality as a sound card.

6.5.2 ANALOG IN/OUT (USB AUDIO/MIDI MODE)


Sets if the signal from the analog inputs (INPUT L/R) is routed to the effect or not. It also sets if the signal from the Analog Heat's FX is routed to analog outputs (OUTPUT L/R and HEADPHONES) or not. These are the settings if USB AUDIO+MIDI mode is chosen in the USB CONFIG menu. For more information, please see "6.8.1 USB CONFIG" on page 22.

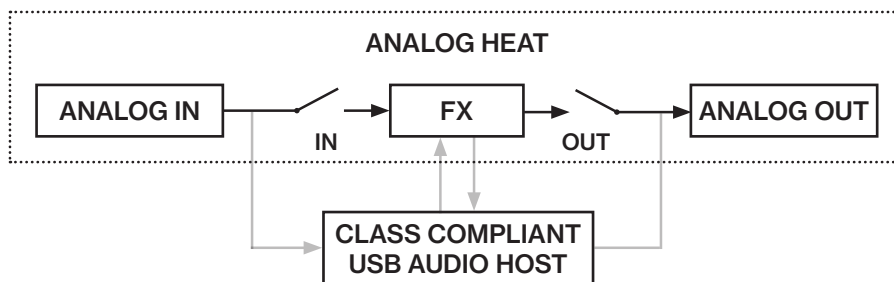

- **AUTO** In AUTO mode, Analog Heat automatically detects if a class compliant USB audio host (computer, smartphone, etc.) is connected or not. If no USB audio host is connected, the signal is routed from Analog In through the Analog Heat's FX to the Analog Out. (Same as the IN+OUT setting.) With the USB audio host connected, the audio routing in AUTO mode depends on which option is selected by the **USB CC MODE** parameter:
 - INSERT sets **ANALOG IN/OUT** to IN+OUT.
 - PRE sets **ANALOG IN/OUT** to OUT.
 - POST sets **ANALOG IN/OUT** to IN.
 - BYPASS sets **ANALOG IN/OUT** to OFF.
- **IN+OUT** Both Analog In and Analog Out are routed to the Analog Heat's FX.
- **IN** Routes the signal from Analog In to the Analog Heat's FX.
- **OUT** Routes the signal from the effect to Analog Out.
- **OFF** Neither Analog In nor Analog Out are routed to the Analog Heat's FX.

6.5.3 USB CC MODE

Sets how and where, in the signal chain, the signal between the Analog Heat and the class compliant USB audio host (computer, smartphone etc.) is routed. This parameter is only available if USB AUDIO+MIDI mode is chosen in the USB CONFIG menu. For more information, please see "6.8.1 USB CONFIG" on page 22.

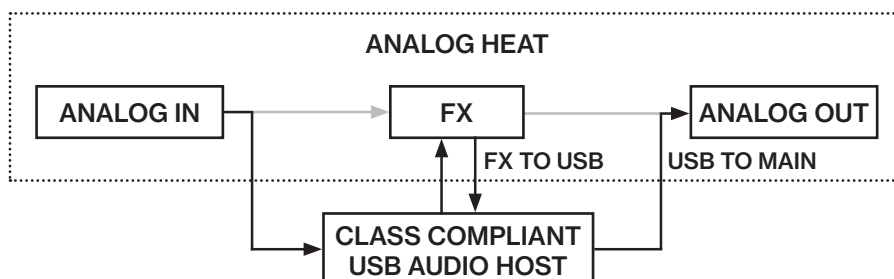

- **INSERT** Routes the audio bi-directionally over USB between the Analog Heat's FX (distortion circuit, EQ, and filter) and the USB audio host.

- **PRE** Routes the audio from Analog In to the USB audio host and then back to the Analog Heat's FX.
- **POST** Routes the audio from the Analog Heat's FX to the USB audio host and then to the Analog Out.
- **BYPASS** Routes the audio from Analog In to the USB audio host and then to Analog Out without being affected by the Analog Heat's FX.



Using a USB audio host together with Analog Heat opens up several interesting possibilities of how to use the Analog Heat. Here are some examples and how the **ANALOG IN/OUT** and **USB CC MODE** parameters should be set to achieve them:

- Analog Heat as an insert effect for the USB audio host:
ANALOG IN/OUT: IN+OUT, USB CC MODE: INSERT
- USB audio host as a pre-Heat insert effect:
ANALOG IN/OUT: OUT, USB CC MODE: PRE
- USB audio host as a post-Heat insert effect:
ANALOG IN/OUT: IN, USB CC MODE: POST
- Analog Heat as a transparent sound card for the USB audio host:
ANALOG IN/OUT: OFF, USB CC MODE: BYPASS

6.5.4 USB TO MAIN


Sets the gain level of the audio sent from the USB audio host to the Analog Heat. This setting only affects the audio sent from the USB audio host to the analog **OUTPUT L/R** and **HEADPHONES** outputs. This parameter is only available if **USB AUDIO+MIDI** or **OVERBRIDGE** mode is chosen in the **USB CONFIG** menu and if it is included in the audio routing chosen in **USB CC MODE**. For more information, please see "6.8.1 USB CONFIG" on page 22. (0 dB–+18 dB)

6.5.5 FX TO USB

Sets the gain level of the audio sent from Analog Heat's FX to the USB audio host. This parameter is only available if **USB AUDIO+MIDI** mode is chosen in the **USB CONFIG** menu and if it is included in the audio routing chosen in **USB CC MODE**. For more information, please see "6.8.1 USB CONFIG" on page 22. (0 dB–+30 dB)

6.6 MIDI

These settings are stored in the global settings and are not part of the preset.

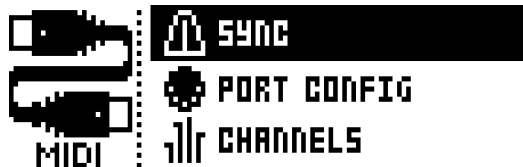

6.6.1 SYNC

- **CLOCK RECEIVE**
Sets whether or not the Analog Heat responds to MIDI clock and transport sent from external devices. (ON, OFF)
- **CLOCK SEND**
Sets whether or not the Analog Heat sends/forwards MIDI Clock and transport. Transport is transmitted when an external clock source (MIDI or Overbridge) is used. (ON, OFF)
- **PROG CHG RECEIVE**
Sets whether or not the Analog Heat responds to incoming program change messages. This is useful when wanting to select presets from an external source. For more information on how to select the appropriate MIDI channel please see "6.6.3 CHANNELS" on page 21. (ON, OFF)
- **PROG CHG SND**
Sets whether or not the Analog Heat sends program change messages when it changes patches. For more information on how to select the appropriate MIDI channel, please see "6.6.3 CHANNELS" on page 21. (ON, OFF)

6.6.2 PORT CONFIG

- **TURBO SPEED**
This setting allows Turbo mode negotiation between Elektron gear. Connecting the Analog Heat to other Turbo protocol compatible gear, like the Analog Rytm and the Octatrack, makes it possible to increase the average MIDI bandwidth by up to 10x. This increases the accuracy of MIDI clock signals as well as the timing of CC messages. (ON, OFF)

- **OUT PORT FUNC**
Sets what type of signal the MIDI OUT port sends.
 - **MIDI** sets the port to send MIDI data.
 - **DIN24** sets the port to send DIN 24 sync pulses. No MIDI data can be sent on the port when this option is selected.
 - **DIN48** sets the port to send DIN 48 sync pulses. No MIDI data can be sent on the port when this option is selected.
- **THRU PORT FUNC**
Sets what type of signal the MIDI THRU port sends. The settings are the same as for **OUT PORT FUNC**.
- **INPUT FROM**
Sets the source from which the Analog Heat receives MIDI data.
 - **MIDI** Only receives MIDI data from the MIDI IN port.
 - **USB** Only receives MIDI data from the USB port.
 - **MIDI+USB** Receives MIDI data from both the MIDI IN and USB port.
 - **NONE** Disregards any incoming MIDI data.
- **OUTPUT TO**
Selects the port to which Analog Heat sends MIDI data (CC or NRPN).
 - **MIDI** Only sends MIDI data to the MIDI OUT port.
 - **USB** Only sends MIDI data to the USB port.
 - **MIDI+USB** Sends MIDI data to both the MIDI OUT and USB port.
 - **NONE** Do not send MIDI data to any port.
- **PARAM OUTPUT**
Sets what type of MIDI messages the **DATA ENTRY** knobs sends. For information about which CC/NRPN parameters that are sent, please see "APPENDIX A: MIDI" on page 33.
 - **CC** Sets the knobs to send CC MIDI messages.
 - **NRPN** Sets the knobs to send NRPN MIDI messages.
- **ENCODER DEST**
Sets whether or not the **DATA ENTRY** and **LEVEL** knobs send MIDI data.
 - **INT** MIDI only sends data internally.
 - **INT + EXT** MIDI sends data both internally and externally.
- **PARAM INPUT**
Makes it possible to control Analog Heat parameters from an external MIDI device sending CC/NRPN data. (ON, OFF)

6.6.3 CHANNELS

- **MIDI CHANNEL**
Sets the MIDI channel that Analog Heat uses to send and receive MIDI data. When set to OFF, all MIDI functionality is disabled. (1-16)

6.7 SYSEX DUMP

In the SYSEX DUMP menu, settings and Presets can be sent and received. Select a menu option using the **PRESET/DATA** knob. Press [YES] to open the highlighted menu selection.



When receiving or sending SysEx data, the MIDI ports or the USB port of the Analog Heat should be connected to the external sending/receiving device.

If the Analog Heat is sending or receiving SysEx data through the MIDI ports, use the Elektron TM-1 USB MIDI interface for up to 10x transfer speeds.

If the external device is a computer, we recommend using our free SysEx utility C6, which can be downloaded from the Elektron website.



Before initiating a SysEx send or receive, first, make sure the receiving device is listening for data to be sent.

6.7.1 SYSEX SEND

Here settings and Presets can be sent to an external device via the MIDI OUT port or the USB port of the Analog Heat.




The column to the left selects what will be sent. Use the **PRESET/DATA** knob to navigate in the column. The SysEx data send alternatives located in the column to the right will change depending on the selection made in the left column. Press **[YES]** to access this column. Use the **PRESET/DATA** knob to select what will be sent. Press **[YES]** to initiate the SysEx send procedure.

SETTINGS will send all the Analog Heat settings to the receiving device.

PRESET will send the selected Preset (or all Presets) to the receiving device.

6.7.2 SYSEX RECEIVE

Here settings and Presets can be received from an external device via the MIDI IN port or the USB port of the Analog Heat.




The column to the left selects what will be received. Use the **PRESET/DATA** knob to navigate in the column. The SysEx data receive alternatives located in the column to the right will change depending on the selection made in the left column. Press **[YES]** to access this column. Use the **PRESET/DATA** knob to select what will be received. Press **[YES]** to initiate the SysEx receive procedure. The Analog Heat starts listening to incoming data. Press **[NO]** to stop listening.

RECEIVE ANY listens to and receives any viable SysEx data (settings, Presets).

PRESET receives and stores a Preset to the selected slot.

6.8 SYSTEM

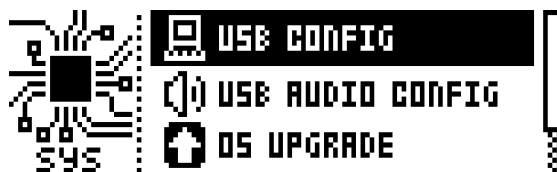

6.8.1 USB CONFIG

- **OVERBRIDGE**
To use the Analog Heat as an Overbridge device, select Overbridge mode. (ON, OFF)
- **USB MIDI**
If you wish to disable the Overbridge integration functionality, then select this option. (ON, OFF)
- **USB AUDIO/MIDI**
Sets the Analog Heat to send and receive audio and MIDI over USB. Select this option if you want to use the Analog Heat together with a class compliant USB audio host. For more information, please see "5.14 CLASS COMPLIANT DEVICE" on page 15.

6.8.2 USB AUDIO CONFIG

USB TO MAIN sets the gain level of the audio sent over USB to the Analog Heat. This setting only affects the audio sent to Analog OUTPUT L/R and HEADPHONES. (0 dB+18 dB)

- **FX ON USB AUDIO** sets if the Analog Heat's effect should process the audio over USB or not, and if it should process the audio going in to, or out from, the Analog Heat. (IN, OUT, OFF)

IN Routes the incoming audio over USB to be processed by the Analog Heat. (For example, PC > (USB audio) > Analog Heat.

OUT Routes the outgoing audio over USB to be processed by the Analog Heat. (For example, Analog Rytm MKII > Analog Heat > (USB audio) -> PC).

OFF Neither incoming nor outgoing audio over USB are routed to the Analog Heat's distortion circuits. But both filter and EQ affects the audio if the device is active.

6.8.3 OS UPGRADE

Use this menu option is used when you want to upgrade the Analog Heat OS. To send the OS syx file, use our free Elektron Transfer software. The OS syx file and Elektron Transfer can be downloaded from the Elektron website.

For the transfer to be possible, the device sending the OS syx file must be connected to the USB port of Analog Heat.

Please note that the Analog Heat will not appear as an icon on your computer desktop.

1. Connect the Elektron device to the computer via USB.
2. Open the Transfer application on your computer.
3. On the Transfer CONNECTIONS page, set the MIDI IN and MIDI OUT ports to your Elektron device.
4. On the Transfer DROP page, drag and drop the OS file. The OS file is then automatically transferred to the Elektron device and the OS update initiates. A progress bar is visible on device screen when receiving the OS.
5. On your device. Press **[YES]** to confirm the OS update.

When the process is successfully completed, the OS is updated and the unit reboots.

6.8.4 CALIBRATION

CALIBRATION starts the calibration routine for the drive circuits and filters. After selecting this option, a popup window appears asking to confirm the calibration. Press **[YES]** to proceed with the calibration. Please note that the calibration routine takes quite a while to complete.



The device should be turned on at least 2 hours before you perform a calibration for its circuits to warm up properly. If the unit has not yet warmed up for 2 hours, there is a calibration countdown counter which automatically initiates the calibration once it reaches the timeout.

Also, please note that nothing should be connected to the device during the calibration. Remember to turn down the volume on all speakers and headphones before activating Test mode.



Analog Heat is factory calibrated. It should not be re-calibrated unless specifically stated by Elektron Support or if prompted by the machine.

7. PARAMETER PAGES

Here follows a description of all the parameters that are on the PARAMETER pages. You access the parameter pages by pressing the **[PARAMETER]** keys. **AMP** has one page. **FILTER/EQ**, **ENV**, and **LFO** has two pages. To access page one, press the **[PARAMETER]** key once. To access page two, press the **[PARAMETER]** key twice.

7.1 AMP PAGE

Press **[AMP]** once to access this parameter page.



7. PARAMETER PAGES

7.1.1 DRIVE

Sets the gain level of the audio into the distortion circuit. A higher setting results in more distortion. Even at zero level some of the circuits have a clear effect on the sound. (0.00–127.00)

7.1.2 WET

Sets the level of the signal that is affected by the effect. Use WET LEVEL to balance the Wet part so that it has a similar level to the Dry part. This makes it easier to use the (Dry/Wet) MIX parameter to do parallel distortion. For more information, please see "4. SIGNAL FLOW" on page 12. (This parameter is written as *WET LEVEL* on the device panel.) (0.00–127.00)

7.1.3 DRY/WET

Sets the mix between the clean signal and the signal that is affected by the effect. (-64.00–63.00)

7.1.4 VOL

Sets the overall level of the sound and is saved as part of the preset. Use this to pick a good output gain for the complete preset (i.e. from the output of the Dry/Wet mix). (0–127)

7.2 FILTER/EQ PAGE 1

Press [FILTER/EQ] once to access this parameter page.



7.2.1 FREQ

Sets the cutoff frequency of the filter. (0.00–127.00)

7.2.2 RESO

Sets the amount of resonance at the cutoff point of the filter. (0.00–127.00)

7.2.3 ENV

Sets the amount of how much the envelope and envelope follower affects the filter frequency. A negative value gives an inverted modulation. (-128.00–127.00)

7.2.4 LFO

Sets the amount of how much the LFO affects the filter frequency. A negative value gives an inverted modulation. (-128.00–127.00)

7.3 FILTER/EQ PAGE 2

Press [FILTER/EQ] twice to access this parameter page.



7.3.1 FRQPAN

Adjust the cutoff frequency of the filter and pans its behavior between the Left and Right channel. At a value of 0 there is no frequency panning effect. Lower values increase the cutoff frequency in the Left channel and decrease it in the Right channel. Higher values increase the cutoff frequency in the Right channel and decrease it in the Left channel. (-64.00–63.00)

7.3.2 DIRT

This parameter sets the amount of input level to the filter. It can be used to slightly overdrive the signal going into the filter, producing filter distortion. (0–127)

7.3.3 EQ LO


Controls the amount of low-end in the equalizer. Depending on selected circuit-type, this affects the low-end in slightly different ways, always tailor-made to suit the characteristics of the selected circuit. (-64.00–63.00)

7.3.4 EQ HI

Controls the amount of high-end in the equalizer. Depending on selected circuit-type, this affects the high-end in slightly different ways, always tailor-made to suit the characteristics of the selected circuit. (-64.00–63.00)

7.4 ENVELOPE PAGE 1

Press [ENV] once to access this parameter page.

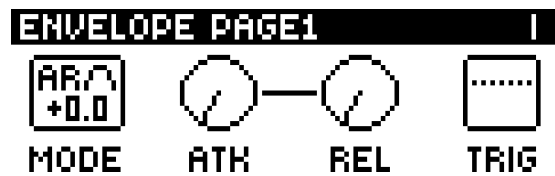


Analog Heat contains an envelope follower function. The envelope follower is used to detect the amplitude variations of the incoming audio signal to produce a control signal (envelope) that resembles those variations. The control voltage rises and falls with the overall volume of the input signal. This control signal can be routed to modulate the filter and also to two other modulation destinations of your choice. For more information, please see "6.2 MODULATION" on page 16. Tightly coupled with the Envelope Follower is also an Envelope Generator. If you do not want to use the follower output directly, you can choose to use the follower only to trigger the Envelope Generator, if you want to use predefined Attack/Decay (or Attack/Release) times rather than follow the audio with the rise/fall slopes. For more information, please see "4.2 MODULATION SIGNAL FLOW" on page 12.

7.4.1 MODE


Sets the mode of the envelope follower. Keep turning the knob to access the next mode. The higher the value under the selected mode, the more gain is added to the signal, which is useful for weak input signals.

- **AR (Attack-Release)**


Creates an envelope control signal where the Attack phase begins when the incoming sound exceeds the threshold. The envelope then holds until the incoming sound falls under the threshold and the release phase starts

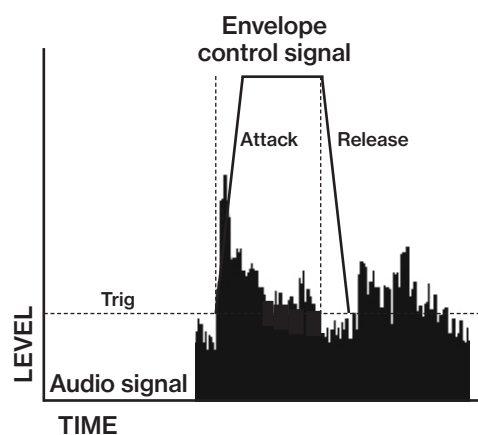

- **AD (Attack-Decay)**
Creates an envelope control signal where the Attack phase begins when the incoming sound exceeds the threshold and is then followed directly by the decay phase.

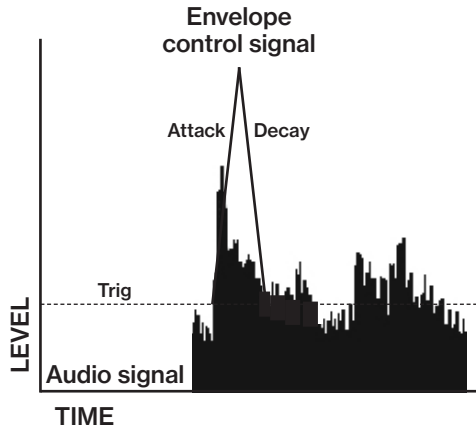

- **FLW (Follow)**
The envelope follows the amplitude of the input signal when it is above the threshold level.

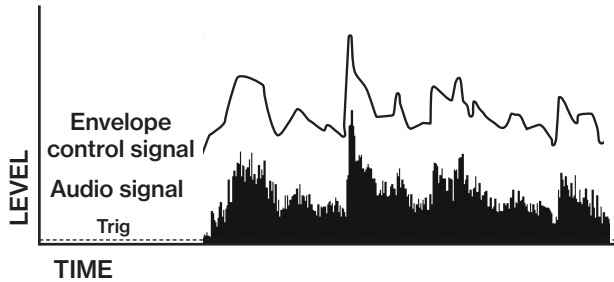

7.4.2 ATK

In Follow (FLW) mode, this is the rise time of the envelope follower, i.e. how quickly the follower rises when the amplitude of the audio increases. In generator mode (AD or AR), this is the attack time of the generated envelope. The rise time of the underlying envelope follower is set to fastest possible rise time in these configurations. (0-127)

7.4.3 REL


In Follow (FLW) mode, this is the fall time of the envelope follower, i.e. how quickly the follower falls when the amplitude of the audio falls. In generator mode (AD or AR), this is the decay- or release time of the generated envelope. The fall time of the underlying envelope follower is set to a good, predefined fall time in these configurations. (0-127)

7.4.4 TRIG

Sets the threshold level at which the envelope follower triggers the envelope generator and the LFO. (0.00-127.00)

7.5 ENVELOPE PAGE 2

Press [ENV] twice to access this parameter page.

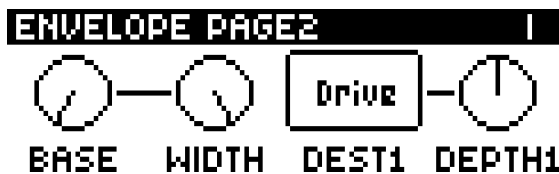

The envelope has three modulation destinations.


1. The first destination is set using the parameter **DEST1**. **DEPTH1** controls the amount of envelope modulation sent to the chosen destination. The first destination can also be set in the MODULATION param-

eter page found at **SETTINGS>MODULATION**. Select **ENV 1ST** as a source and then select modulation destination and modulation depth. For more information, please see "6.2 MODULATION" on page 16.

- The second destination is set in the **MODULATION** parameter page (see above). Select **ENV 2ND** as a source and then select modulation destination and modulation depth.
- The third modulation destination is permanently set to the filter cutoff. The parameter **ENV** on the **FILTER/EQ PAGE 1** parameter page controls the amount of envelope modulation added to the filter cutoff.

The envelope follower uses a filter to define the frequency span of the input signal that the envelope follower reacts to. This span is defined by the **BASE** and **WIDTH** parameters.

Examples of how the **BASE** and **WIDTH** parameters affect the filter of the envelope follower:

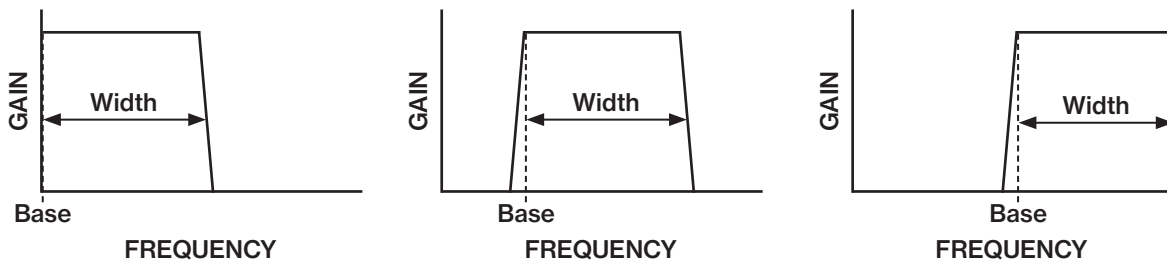

With **BASE** set to 0, the envelope follower filter functions as a low pass filter with **WIDTH** adjusting the frequency range.

With **WIDTH** set to 127, the envelope follower filter functions as a high pass filter with **BASE** adjusting the frequency range.

If you want the envelope follower to trigger specifically on different types of drums in a loop (for example the snare, or the hi-hats), this filter is very usable to isolate these elements.

7.5.1 BASE

Sets the base frequency of the filter detection. (0–127)

7.5.2 WIDTH

Sets the frequency width above the base frequency. (0–127)

7.5.3 DEST1

Sets the modulation destination of the envelope follower. For more information, please see "APPENDIX B: MODULATION SOURCES AND DESTINATIONS" on page 34.

7.5.4 DEPTH1

Sets the amount of how much the envelope follower affects the modulation destination. A negative value gives an inverted modulation. (-128.00–+127.00)

7.6 LFO PAGE 1

Press [**LFO**] once to access this parameter page.



7.6.1 SPEED

Sets the rate of the LFO in relation to the internal or external tempo. It is synced to BPM if one of the "BPM x" settings are selected in the **MULT** parameter. To sync the LFO to straight beats, try settings of 16 or 32. The value of this parameter is bi-polar. (The LFO shape can be played backward by using negative values.) For more information, please see "6.3.1 INTERNAL TEMPO" on page 17. (-64–63)

7.6.2 MULT


Multiplies the **SPEED** parameter by the set factor. (x) multiplies the current BPM. 1-2K multiplies the LFO speed regardless of the current internal or external tempo.

7.6.3 WAVE

Sets the LFO waveform. (TRI, SINE, SQR, SAW, EXP, RAMP, RND)

7.6.4 START

Sets wherein the LFO waveform cycle it starts when triggered. (0–127) For example, if you set WAVE to SAW and START to 64 it works like this:

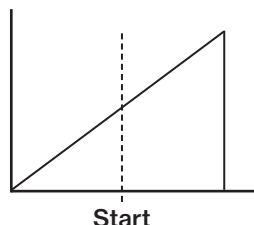**7.7 LFO PAGE 2**

Press [LFO] twice to access this parameter page.



The LFO has three modulation destinations.

1. The first is set using the parameter **DEST1**. The amount of LFO modulation added to the selected destination is controlled by the parameter **DEPTH1**. The first modulation destination can also be set in the MODULATION parameter page found at SETTINGS>MODULATION. Select LFO 1ST as a source and then select modulation destination and modulation depth. For more information, please see "6.2 MODULATION" on page 16.
2. The second destination is set in the MODULATION parameter page (see above). Select LFO 2ND as a source and then select modulation destination and modulation depth.
3. The third modulation destination is permanently set to the filter cutoff. The amount of LFO modulation added to the filter cutoff is controlled by the parameter **LFO** on the FILTER/EQ PAGE 1 parameter page.

7.7.1 FADE

FADE offers the possibility to fade in/out the LFO modulation. Positive values give a fade-out, negative values give a fade-in. A middle position (0) results in no fade in/out. The fade curve is restarted each time the LFO triggers. For more information, please see "7.4.4 TRIG" on page 26. (-64–63)

7.7.2 MODE

Selects between four different modes of LFO behavior.

- **FREE** is the default free-running mode. The LFO run continuously, never restarting or stopping.
- **TRIG** The LFO run continuously, but restarts on the event of an envelope trig.
- **HOLD** The LFO run continuously, but on the event of an envelope trig, the output LFO level is latched and held still until the next envelope trig
- **ONE** The LFO starts when a note is triggered, then runs to the end of the waveform and then stops. This makes the LFO function similar to an envelope.
- **HALF** The LFO starts when a note is triggered, then runs to the middle of the waveform and then stops.

7.7.3 DEST1

Sets the modulation destination of the LFO. For more information, please see "APPENDIX B: MODULATION SOURCES AND DESTINATIONS" on page 34.

7.7.4 DEPTH1

Sets the amount of how much the LFO affects the modulation destination. A negative value gives an inverted modulation. (Range -128.00–127.00.)

8. TIPS & TRICKS

Here you can find a couple of different examples of some of the things you can do with the Analog Heat.

8.1 ADDING SATURATION TO THE HIGH REGISTER

You can use the Analog Heat to add saturation to the high-frequency register of a full range mix. This is useful when you want to introduce some subtle harmonics to the mix, without distorting the overall sound.

1. Select the **SATURATION** circuit and the **HIGH PASS 2** filter.
2. Connect your sound source to the Analog Heat and make sure that the volume of the sound source is as strong as possible.
3. Make sure the input level is correctly set. For more information, please see "3.2 SETTING THE INPUT SENSITIVITY LEVEL" on page 10.
4. Start by setting **DRIVE** to 0, **WET LEVEL** to 127, and **DRY/WET** to 0. Set the filter **RESONANCE** to 0 and **FREQUENCY** to 100.
5. Increase **DRIVE** until you start to hear a little saturation in the higher registers, but not so much that the saturation gets too dominant. The processed signal is lower than the bypassed signal, so you should adjust the preset volume (For more information, please see "7.1.4 VOL" on page 24.) to match the active and bypassed state to be able to A/B test correctly.
6. Tweak **DRY/WET** and **DRIVE** until you find a nice balance and the sound you want. If you want to use the EQ, remember that only **HIGH EQ** affects the sound, since the low frequencies are filtered out.

8.2 PSEUDO-COMPRESSION

You can use the Analog Heat to emulate a compressor and/or expander by using the Envelope Generator. This is useful if you want to add some extra pump to drums, or to liven up a flat sound. In this example, you should use a highly dynamic sound source, with sharp transients, such as drums.

1. Select the **CLEAN BOOST** circuit and disable the filter by pressing both **[FILTER TYPE]** keys at the same time. All filter type LEDs should be turned off.
2. Connect your sound source to the Analog Heat and make sure that the volume of the sound source is as strong as possible.
3. Make sure the input level is correctly set. For more information, please see "3.2 SETTING THE INPUT SENSITIVITY LEVEL" on page 10.
4. Start by setting **DRIVE** to 0, **WET LEVEL** to 127, and **DRY/WET** to 127.
5. Press the **[AMP]** key to access AMP PAGE, and set **VOL** to 127.
6. Press the **[ENV]** key to access ENVELOPE PAGE 1, and set **MODE** to AD. Adjust the **MODE (AD)** parameter until you clearly see the incoming signal in the **TRIG** meter. You should see the peaks and dips of the incoming signal, retaining as much as possible of dynamics of the signal.
7. Lower the **TRIG** value until you see the trigger icon blink in the upper right corner of the screen. Make sure it triggers mainly from the strongest peaks of the incoming sound.
8. Set **ATK** to 48, and **REL** to 72.



9. Press **[ENV]** a second time to access ENVELOPE PAGE 2 and change **DEST1** to PRESET VOL and **DEPTH1** to -72.

You should now hear a very dynamic ducking effect with pretty sharp transients. You can change **VOL**, **ATK**, **REL**, and **DEPTH1** to achieve different compression effects.

If you change **VOL** to 80 and apply positive modulation (**DEPTH1**), you expand the signal instead of compress it.

Bonus: Adding LFO

1. Press the **[LFO]** key to access LFO PAGE 1.

9. STARTUP MENU

2. Set **WAVE** to SQR, **SPEED** to 1, and **MULT** to x1.
3. Press the **[LFO]** key again to access LFO PAGE 2.
4. Set **DEST1** to PRESET VOL, **MODE** to TRI, and **FADE** to 40.
5. Apply positive modulation from **DEPTH1** for even louder transients.

Note that **DEPTH1** on ENVELOPE PAGE 2 need to be lowered to make room for the LFO modulation.

8.3 STEREO PHASER EFFECT

The Analog Heat can also achieve an effect similar to that of a classic stereo phaser pedal by using the filter frequency panning function.

1. Select any circuit and set the **[FILTER TYPE]** to BAND STOP.
2. Connect your sound source to the Analog Heat and make sure that the volume of the sound source is as strong as possible.
3. Make sure the input level is correctly set. For more information, please see "3.2 SETTING THE INPUT SENSITIVITY LEVEL" on page 10.
4. Start by setting **WET LEVEL** to 127, and **DRY/WET** to 63. Set **FREQUENCY** to 64, and **RESONANCE** to 0.
5. Press the **[LFO]** key twice to access LFO PAGE 2, and change **DEST1** to FILTER PAN and set **DEPTH1** to around +64.
6. Press the **[LFO]** key to access LFO PAGE 1 and set **SPEED** to your liking.

You should now hear a phasing effect applied to your sound. Try playing around with the LFO waveforms, speed, and depth, as well as the filter frequency. The different Filter Types have a different impact on the sound when you use the filter frequency panning.

9. STARTUP MENU

To access this menu, hold down the **[ACTIVE]** key while powering up the Analog Heat. From here you can perform a variety of tasks.

9.1 TEST MODE

To enter this mode, press the **[AMP]** key.



For testing purposes, a short sound is heard through all outputs of the Analog Heat.

If you have any trouble with your Analog Heat and suspect it may be due to a hardware problem, perform this self-test. Use the **PRESET/DATA** knob to scroll through the test log. A fully functional device should not report any errors. If it does report an error, please contact Elektron support or the retailer that you bought your Analog Heat from.

9.2 EMPTY RESET

To perform an empty reset, press the **[FILTER/EQ]** key. This will reset the device and erase all presets.

9.3 FACTORY RESET

To perform a factory reset, press the **[ENV]** key. This will reset the device and overwrite preset 001–016 with factory presets. The remaining preset slots will be empty.

9.4 OS UPGRADE

Initiate the OS upgrade by pressing the **[LFO]** key. Use this menu option if you for some reason cant upgrade the Analog Heat OS using the standard procedure in the SYSTEM menu. To send the OS file, use our free Elektron Transfer software. The Elektron Transfer can be downloaded from the Elektron website.

1. Download the Analog Heat OS file from the Elektron website.
2. Connect the Analog Heat's MIDI IN port to the MIDI OUT port of the computer's MIDI interface.
3. Hold down the **[FUNC]** key while powering on Analog Heat. This takes you to the STARTUP menu.

4. Press the [LFO] key to enter OS UPGRADE mode.
5. Open the Transfer application on your computer. On the Transfer CONNECTION page, click “go to the SYSEX TRANSFER page”.
6. On the SYSEX TRANSFER page, click “OS Upgrade via device startup menu”, and then follow the on-screen instructions.

When the update is done, the Analog Heat will reboot.



USB MIDI transfer is not possible when upgrading the OS from the STARTUP menu.

10. TECHNICAL INFORMATION

ELECTRICAL SPECIFICATIONS

Impedance balanced audio outputs

Main outputs level: +22 dBu peak

Output impedance: 440 Ω unbalanced

Headphones output

Headphones out level: +22 dBu peak

Output impedance: 55 Ω

Balanced audio inputs

Input level: +22 dBu peak

Audio input impedance: 39 k Ω

Control inputs

Input level on tip: -5 V–+5 V. Supplies +5 V on ring

Accepts CV, Expression pedals, Footswitches

Unit power consumption: 12 W typical

Recommended power supply: PSU-3/b/c,

12 V DC, 2A

HARDWARE

122 x 32 pixel back-lit LCD

MIDI In/Out/Thru with DIN Sync out

2 x 1/4" impedance balanced audio out jacks

2 x 1/4" balanced audio in jacks

1 x 1/4" stereo headphone jack

2 x 1/4" control input jacks

48 kHz, 24-bit D/A and A/D converters

Electrically isolated Hi-speed USB 2.0 port

Power inlet: Center positive 5.5 x 2.5 mm barrel jack,
12 V DC, 2A

PHYSICAL SPECIFICATIONS

Sturdy steel casing

Dimensions: W 215 x D 184 x H 63 mm (8.5" x 7.2" x 2.5") (including power switch, jacks, knobs and feet)

Weight: approximately 1.5 kg (3.3 lbs)

100 x 100 mm VESA mounting holes. Use M4 screws with a max length of 7.4 mm.

Maximum recommended ambient operating temperature: +35°C (+96°F)

11. CREDITS AND CONTACT INFORMATION

CREDITS

PRODUCT DESIGN AND DEVELOPMENT

Oscar Albinsson
Ali Alper Çakır
Ufuk Demir
Oscar Dragén
Magnus Forsell
Anders Gärder
Fabian Hundertmark
Christer Lindström
Jimmy Myhrman
David Revelj
Mattias Rickardsson

ADDITIONAL DESIGN

Johan Damerau
Thomas Ekelund
Simon Mattisson
Jon Mårtensson
Olle Petersson
Cenk Sayınlı

DOCUMENTATION

Erik Ångman

CONTACT INFORMATION

ELEKTRON WEBSITE

<http://www.elektron.se>

OFFICE ADDRESS

Elektron Music Machines MAV AB
Banehagsliden 5
SE-414 51 Gothenburg
Sweden

APPENDIX A: MIDI

This appendix lists the CC and NRPN numbers for the Analog Heat.

Parameter	CC MSB	CC LSB	NRPN MSB	NRPN LSB	Specific values info
Circuit Select	70		0	70	0=CB, 1=SA, 2=EN, 3=MD, 4=RC, 5=CD, 6=RF, 7=HG
Drive	12	37	0	12	
Wet Level	11	38	0	11	
Dry/wet Mix	8	39	0	8	
Preset Volume	7		0	7	
EQ Low	9	40	0	9	
EQ High	10	41	0	10	
VCF Mode	80		0	80	1=LP2, 3=LP1, 5=BP, 7=HP1, 9=HP2, 11=BS, 13=PK
VCF Frequency	74	42	0	74	
VCF Frequency Pan	79	49	0	79	
VCF Resonance	71	43	0	71	
VCF Dirt	13		0	13	
ENV to Filter	14	44	0	14	
LFO to Filter	15	45	0	15	
ENV Threshold	16	46	0	16	
ENV Attack	73		0	73	
ENV Release	72		0	72	
ENV Base	17		0	17	
ENV Width	18		0	18	
ENV Mode	19		0	19	
ENV Destination	75		0	75	
ENV Depth	20	47	0	20	
ENV Destination 2	76		0	76	
ENV Depth 2	21		0	21	
LFO Waveform	83		0	83	0=TRI, 1=SIN 2=SQR, 3=SAW, 4=EXP, 5=RAMP, 6=RND
LFO Speed	22		0	22	
LFO Multiplier	23		0	23	
LFO Fade	24		0	24	
LFO Mode	25		0	25	0=FREE, 1=TRIG, 2=HOLD, 3=ONE, 4=HALF
LFO Start Phase	26		0	26	
LFO Destination	77		0	77	
LFO Depth	27	48	0	27	
LFO Destination 2	78		0	78	
LFO Depth 2	28		0	28	
CV A Destination	85		0	85	
CV A Depth	86		0	86	
Expr. A Destination	87		0	87	
Expr. A Depth	88		0	88	
CV B Destination	89		0	89	
CV B Depth	90		0	90	
Expr. B Destination	91		0	91	
Expr. B Depth	92		0	92	

APPENDIX B: MODULATION SOURCES AND DESTINATIONS

This appendix lists parameters that can be modulated by one or more of the following modulation sources; Envelope/Envelope Follower, LFO, and Expression pedal/CV.

Parameter	Modulation source		
	ENV	LFO	EXP/CV
Drive	X	X	X
Wet Level	X	X	X
Dry/Wet Mix	X	X	X
Preset Volume	X	X	X
EQ Low	X	X	X
EQ High	X	X	X
VCF Frequency	X	X	X
VCF Frequency Pan	X	X	X
VCF Resonance	X	X	X
VCF Dirt	X	X	X
ENV to VCF		X	X
LFO to VCF	X	X	X
ENV Trig Level			X
ENV Attack			X
ENV Release			X
ENV Base			X
ENV Width			X
ENV Destination			X
ENV Depth			X
ENV Destination 2			X
ENV Depth 2			X
LFO Waveform	X		X
LFO Speed	X		X
LFO Multiplier	X		X
LFO Fade	X		X
LFO Mode	X		X
LFO Start	X		
LFO Destination	X		X
LFO Depth	X		X
LFO Destination 2	X		X
LFO Depth 2	X		X

INDEX

A**ACTIVE MODE 13****AMPLIFIER 23**

- Drive 24
- Dry/Wet 24
- Volume 24
- Wet 24

AUDIO & ROUTING 18, 19**B****BACKUP 15****C****CALIBRATION 23****CLASS COMPLIANT 15**

- Analog In/Out 19
- USB CC mode 19

CONNECTIONS 9**CONTROL INPUTS 17****CREDITS AND CONTACT INFORMATION 32****CV 17****E****EFFECT CIRCUITS 13****ENVELOPE (FOLLOWER) 25**

- Attack 26
- Base 27
- Filter 27
- Mode 25
- Modulation depth 27
- Modulation destination 27
- Release 26
- Trigger 26
- Width 27

EQUALIZER 24**EXPRESSION PEDAL 17****F****FACTORY RESET 30****FILTER**

- Dirt 24
- Env modulation 24
- Frequency 24
- Frequency panning 24
- LFO modulation 24
- Resonance 24

FOOTSWITCH 17**I****INPUT LEVEL**

- Input sensitivity 16
- Setting 10

L**LCD SCREEN 14****LFO 27**

- Fade 28
- LFO Tempo 17
- Mode 28
- Modulation depth 28
- Modulation destination 28

Multiplier 27

Phase 28

Speed 27

Waveform 28

M**MIDI 18, 20**

- CC, NRPN specification 33
- Ports 20
- Sync 18, 20

MODULATION SOURCES/DESTINATIONS 34**O****OS UPGRADE 23****OVERBRIDGE 15****P****PANEL LAYOUT AND CONNECTIONS**

- Connecting the unit 10
- Front panel 8
- Rear panel 9

PARAMETER EDITING 14**PARAMETER PAGES 14****PARAMETERS 23**

- Amp 23
- Envelope follower 25
- EQ 24
- Filter 24
- LFO 27

PRESETS 12

- Loading a preset 12
- Preset volume 24
- Saving a preset 13

S**SAFETY AND MAINTENANCE 3****SETTINGS MENU**

- Audio 16
- Audio & Routing 18, 19
- Control in 17
- Input sensitivity 16
- MIDI 18, 20
- Options 17
- System 22

SETUP EXAMPLES 11, 15**SIGNAL FLOW 12**

- Audio signal flow 12
- Modulation signal flow 12

STARTUP MENU 30**SYSEX DUMP 21****SYSTEM 22**

- Calibration 23
- OS Upgrade 23
- USB config 22

T**TECHNICAL INFORMATION 31****TEMPO 17****TEST MODE 30****TIPS & TRICKS 29**

 **elektron**